1. Packing List

1. Prestigio MultiPad
2. AC Adapter
3. Carrying Case
4. USB Cable
5. Quick Start Guide
6. Warranty Card
7. Legal and Safety Notices
8. OTG Cable

2. Device Overview

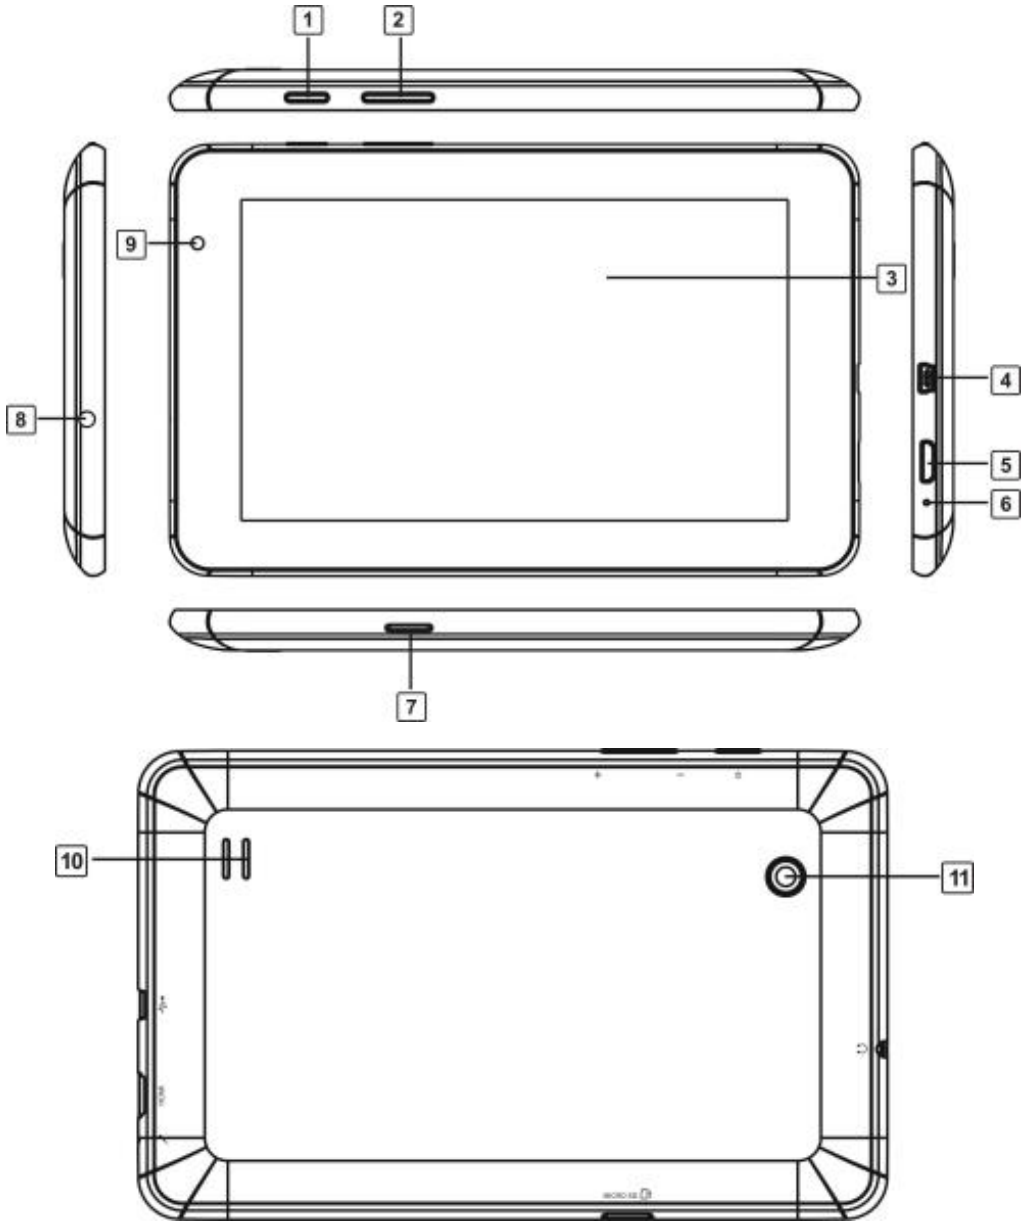

1	**Power**	Turn on/off the device; Suspend/Activate the device
2	**Vol +\ Vol - Button**	Adjust the volume level.
3	**Touch screen**	Multi-touch up to 5 points
4	**USB port**	USB connection
5	**HDMI**	HDMI cable connection
6	**Built-in Microphone**	Record sounds.
7	**Micro SD Card Slot**	Insert Micro SD card.
8	**Earphone Jack**	Earphones connection.
9	**Front Camera**	Take photos or video chat
10	**Speaker**	Emit sound, voice or music
11	**Rear Camera**	Take photos.

Getting Started

3. Charging

- Insert the connector of adaptor to the USB port of the device and connect the power adapter to the wall socket for charging.
- Normally it takes approximately 4 hours to fully charge the device. Operating the device while charging with the AC adapter may extend the time of full charging.

4. Power on/Power off

- To turn on the device, press and hold the **Power Button** until you see the start-up screen then release. It will automatically enter the **Home** screen. If it is first time to use it, it will enter Prestigio Wizard screen. Please follow the on-screen instructions
- Press the **Power Button** once to enter sleep mode and press it again to awake the device.
- Press and hold the **Power Button,** and then tap on **OK** to power off the device.

5. Inserting a Memory Card

- The device supports micro SD/SDHC cards.
- To insert a Micro SD card, place the card connector towards the front side of the device and the printing side of the card towards the rear side of the device.
- To remove the micro SD card, gently press the edge of the card to release the safety lock and pull the card out of the slot.

Notice:

When you are reading the file from micro SD card, please don't remove it, or the device could fail to operate correctly.

6. Connecting to Wi-Fi

- In the Home menu press the icon and select **Settings** icon to access the list of options. Select **Wireless & networks**.
- If the Wi-Fi is off, tap on the Wi-Fi line to turn it on.
- The device will scan for available Wi-Fi networks and display them at the right of the screen.
- Tap on the network you want to connect to. Then tap inside the Wireless password field to make the virtual keyboard appear. Enter the required network information, tap on **Enter**, and then tap on **Connect**.
- Your device will now attempt to establish a connection to the Wi-Fi access point with the network parameters you entered.

7. Transferring content from PC

- Connect the device to your PC/Notebook via USB cable.
- Select the content you want to transfer from your PC/Notebook.
- Drag the content from the PC/Notebook to the device.
- Please do not disconnect the USB cable during loading. It may cause malfunction of the device and files.
- Left click on to disconnect the device and PC/Notebook safely.

EN

Technical Specifications

Processor	ARM Cortex A9 Dual core up to 1.6GHz &Mali 400 Quad Core GPU
RAM	1GB DDR3
Display	7” IPS LCD, Capacitive Multi-touch
Resolution	1024 x 600 pixels
Storage capacity	8GB flash memory (about 6.0GB are accessible by user)
Interfaces	USB 2.0, Micro SD (micro SDHC compatible), USB Host
Communications	Wi-Fi (802.11 b/g/n)
Battery	4100 mAh Li-Poly battery
Dimensions	195 x 123 x 12mm (L x W x H)
Weight	356 g
Storage Temperature	-20℃ ～ +55℃
Operation Temperature	5℃ ～ +35℃
Operation Relative Humidity	35% ～ 85%
Storage Relative Humidity	20% ～ 93%

Disclaimer

As the Prestigio products are constantly updated and improved, your device’s software may have a slightly different appearance or modified functionality than presented in this Quick Start Guide.